

# TENSION FABRIC INSTRUCTIONS

## TRADEWIND SETUP



Position collapsed TradeWind frame with bottom hubs on ground and fabric graphics facing forward.



To expand the frame, grasp center scissor tubes and pull upward and outward.



Magnetic connector tubes on middle hubs will engage opposing hubs to lock frame in expanded position.



Expanded TradeWind display should appear as shown.

# TENSION FABRIC INSTRUCTIONS

## TRADEWIND TAKE-DOWN



Remove large fabric graphics. The TradeWind system may be stowed with single-quad fabric panels attached. However panels larger than a single frame quad should be removed to prevent fabric being pinched in scissors.



Standing behind TradeWind, grasp front and rear hubs at middle of frame and pull sharply apart to simultaneously pop loose magnetic connector tubes from hubs.



Continue to ease frame downward until it is fully collapsed.



**CHANGING FABRIC PANELS:** Fabric graphic panels are mounted by pulling taut over frame and inserting mounting pins on hubs through buttonholes on fabric panels. Simply remove old graphic panels from pins and replace with new graphics. Note that a variety of panel shapes and mounting patterns may be used with TradeWind.