

TENSION FABRIC INSTRUCTIONS


CONTOUR BACKWALL

Assemble frame and apply fabric on either a clean surface or using a drop cloth. Use white gloves to assemble frame and to keep dirt and fingerprints away from fabric.

Assemble frame by matching numbered joints and connecting with snap button connectors. Ensure that each snap button is fully engaged in matching hole for a secure connection.

To install baseplate, insert spigot on baseplate into tube end at bottom of frame, insert locking pin, and snap retaining band over end of pin. See illustration below.

Apply cover from the top of the frame. Gently pull fabric to the bottom and zip closed. Adjust fabric by pulling and twisting around the tubes for best fit.

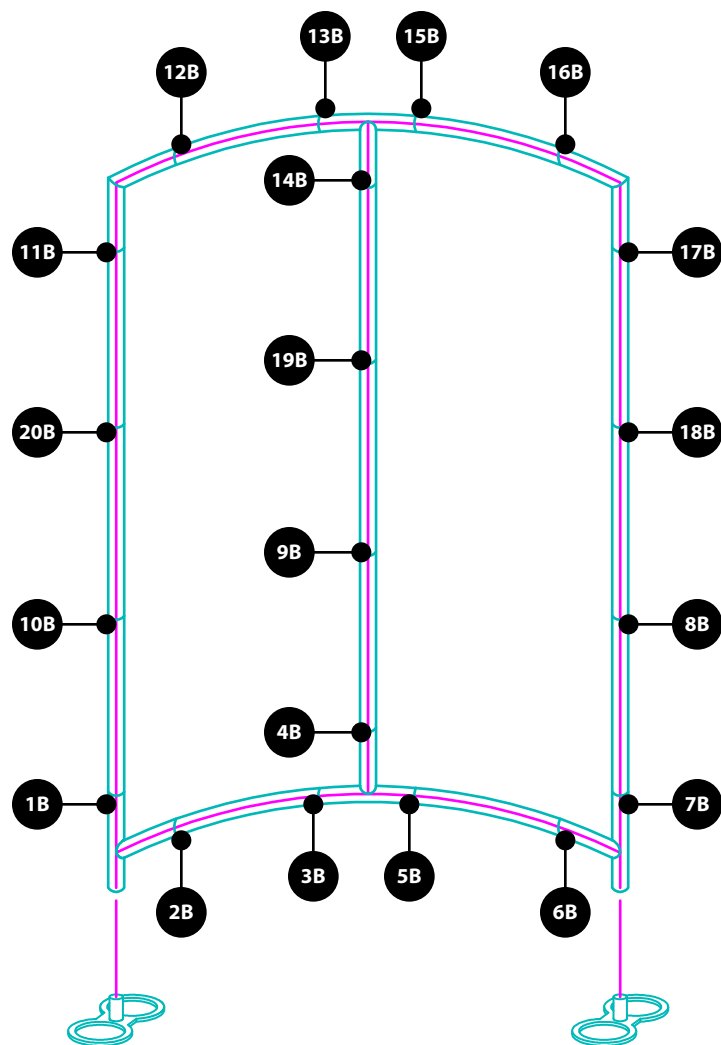

SNAP-BUTTON
CONNECTOR



BASEPLATE
ATTACHMENT