

## ASSEMBLY INSTRUCTIONS

# Wave - 20ft long x 8ft tall curved wall

\*No tools required

### Instructions


Build frame and apply fabric for sign on either a very clean surface or on a drop cloth. Use white gloves or make sure to have very clean hands to assemble frame to keep dirt and unwanted prints away from fabric.

Begin assembly by connecting **shock-corded joints** for all upright tubes.

For ease of assembly, avoid twisting or bending when connecting aluminum tubes. The tubes should slide together in line from the button to the hole. Make sure the button is fully engaged for a secure joint. If you are having trouble connecting the final joint, loosen nearby fittings and assemble simultaneously.

The **foot plates** have attached fittings that will join the two bottom corners. Assemble **bottom rails to upright tubes** with the snap button connections as per the matching labels. Add **internal rails** and join **top rail tubes** in the same fashion.

Apply fabric pillowcase cover from the top of the frame. Carefully and evenly pull the cover down and zip closed along the bottom. Adjust fabric by pulling and twisting gently on seams for best fit.

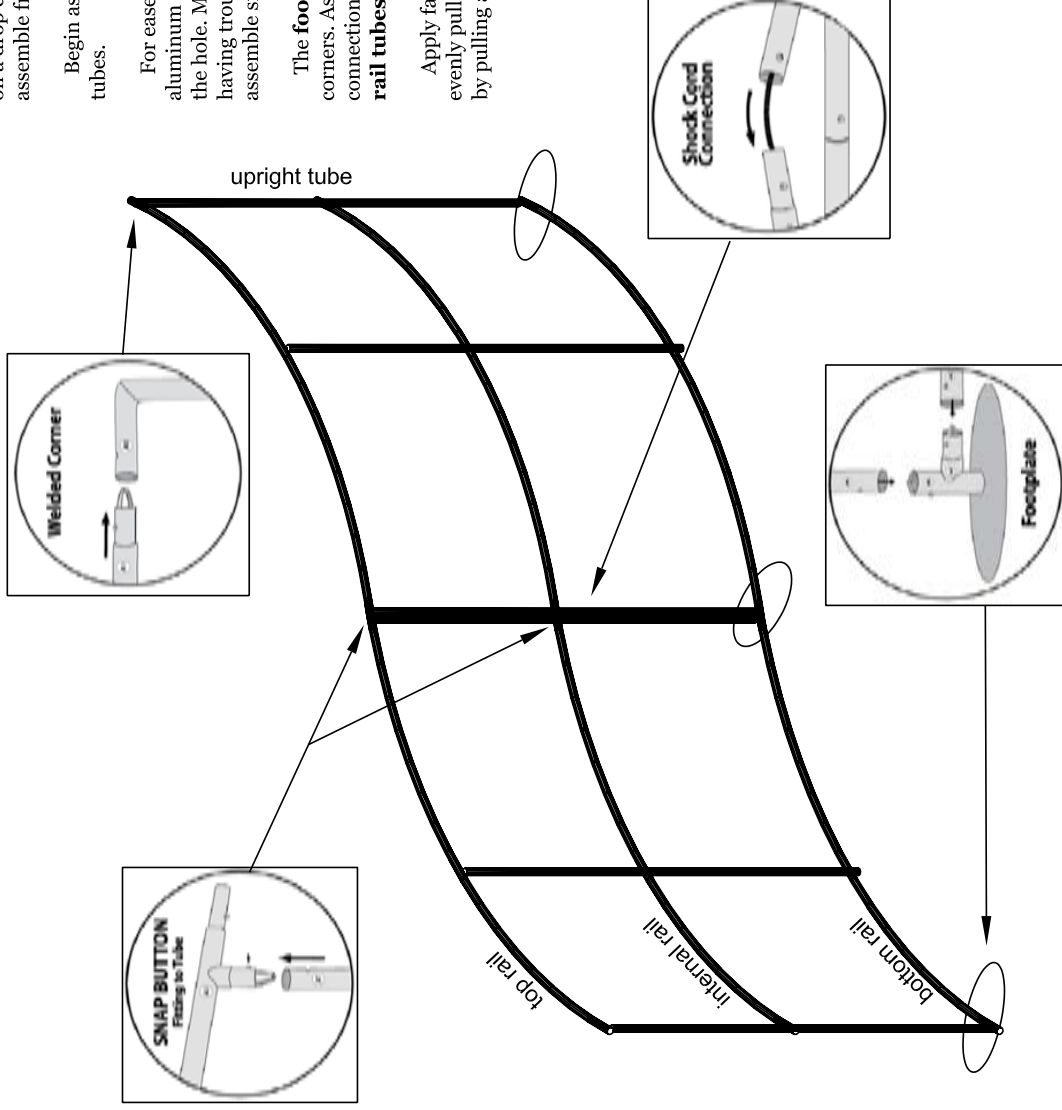

**WAVE SETUP**

24/7 Support 1.800.663.1737

[www.xibita.ca](http://www.xibita.ca)

[www.theportables.com](http://www.theportables.com)